

OUTSIDE
TWO-WAY



PRODUCT DATA SHEET

ISOWINDOW UVAU WS

The window tape two-way consists of a highly UV-resistant fleece backing that can be painted over and is coated with a heavy-duty adhesive. The back of the tape is completely adhesive and has separate liners. The adhesive strip covering the upper side can be attached directly onto the window frame without removing a liner, and the tape can therefore be totally concealed when installed. ISOWINDOW UVAU WS Window Tape is suitable for window installation conform to RAL and ÖNORM B 5320.

FIELD OF APPLICATION

- for window installation

ADVANTAGES

- fingerlift
- 12 months UV-resistance
- resistance to air and wind-driven rain
- soft, flexible structure
- extremely good adhesion on all kinds of window frames and various substrates, e.g. concrete, OSB, wood, vapour barriers
- two-way adhesive coating for concealed installation
- liner split
- can be plastered over and painted over

STANDARDS

Meets the requirements of the following standards

- DIN 4108-7
- ÖNORM B 8110-2
- ÖNORM B 5320
- SIA 180
- RAL-compliant

AVAILABLE IN THE FOLLOWING DIMENSIONS

Type	WS
Roll width	80 mm
Roll length	25 m
Split liner	25/55
Carton	4 Rollen

PRODUCT DATA

Material composition	Flexible fleece, laminated air-tight
Colour	Grey with black imprint
sd-value	0,19 m
Temperature resistance	-40 °C - 80 °C
UV-resistance	12 months
Working temperature	-5 °C - 40 °C
Storage	12 months; cool and dry

ISOWINDOW UVAU WS

INFO

ISOWINDOW UVAU WS is fixed to the window reveal before the window is installed. The fleece side of the tape can be plastered over and painted over. The fully adhesive side is attached to masonry, wood, OSB or vapour barrier. The substrate should be sufficiently supporting


(1)

The fleece side of ISOWINDOW is covered with a narrow acrylic adhesive strip that can be attached directly to the window frame without removing a liner.




(2)

Lay the window frame with the inside facing upwards. Press the mounting strip carefully onto the window frame. Roll the ISO-WINDOW along as far as the corner.

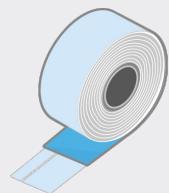

(3)



Make a fold at the corners. Do this by pressing the window tape firmly as far as the corners of the window frame, push the material along and make a fold. These 'corners' are to ensure tightness at the corners.

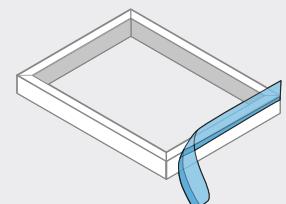

(4)

When the window tape is attached to the entire window frame and the joint insulated, pull off the wide masking paper and press onto the window frame.

The more pressure applied, the better the adhesion (AIRSTOP ROLL Pressing Roller, AIRSTOP RAK Plastic Squeegee)!

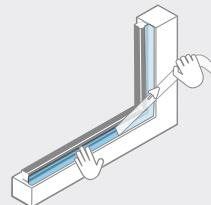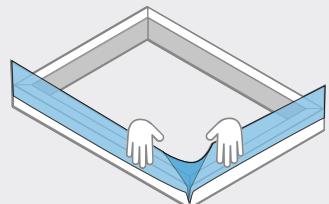

ISOCELL GmbH & Co KG

Gewerbestraße 9
5202 NEUMARKT AM WALLERSEE | Österreich
Tel.: +43 6216 4108
office@isocell.at

ISOCELL FRANCE

170 Rue Jean Monnet | ZAC de Prat Pip Sud
29490 GUIPAVAS | France
Tel.: +33 2 98 42 11 00
contact@isocell-france.fr

ISOCELL Sverige AB

Torshamngatan 35
164 40 KISTA | Sverige
Tel.: +46 10 130 25 00
info@isocell.se

ISOCELL SCHWEIZ AG

Herbergstrasse 29
9524 ZUZWIL | Suisse /Schweiz
Tel.: +41 71 940 06 72
office@isocell.ch

ISOCELL BUREEL BELGIË

Außenborner Weg 1 | Schuppen
4770 AMEL | Belgique
Tel.: +32 80 39 90 58
office@isocell.be

ISOCELL
www.isocell.com